XMODS™ Body Kit for Nissan 350Z

60-8523

The XMODS™ Body Kit lets you customize the body of your car with skirts, tailpipe, bumpers, hood and spoilers. You can also change the controller's steering wheel.

1

Assemble the upgrade body parts in the order listed below.

1) Replace the front bumper.
2) Replace the hood.
3) Replace the spoiler.
4) Screw the tailpipe to the new rear bumper and replace the bumper.
5) Replace the left and right side body skirts.

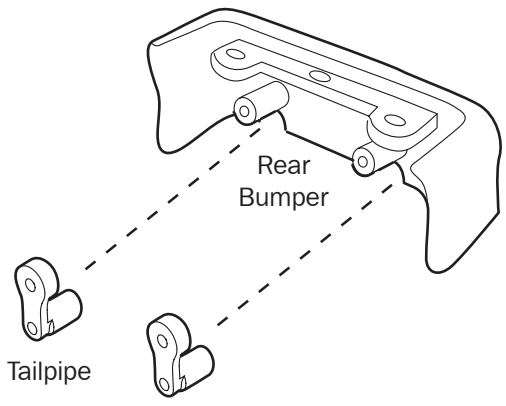

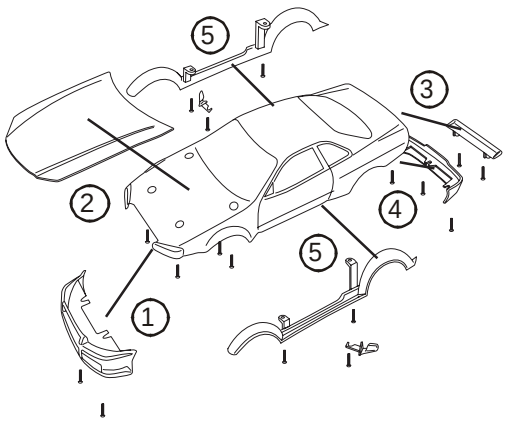

CAUTION: Overtightening the screws can strip the screw holes.

2

Install the controller's new steering wheel.

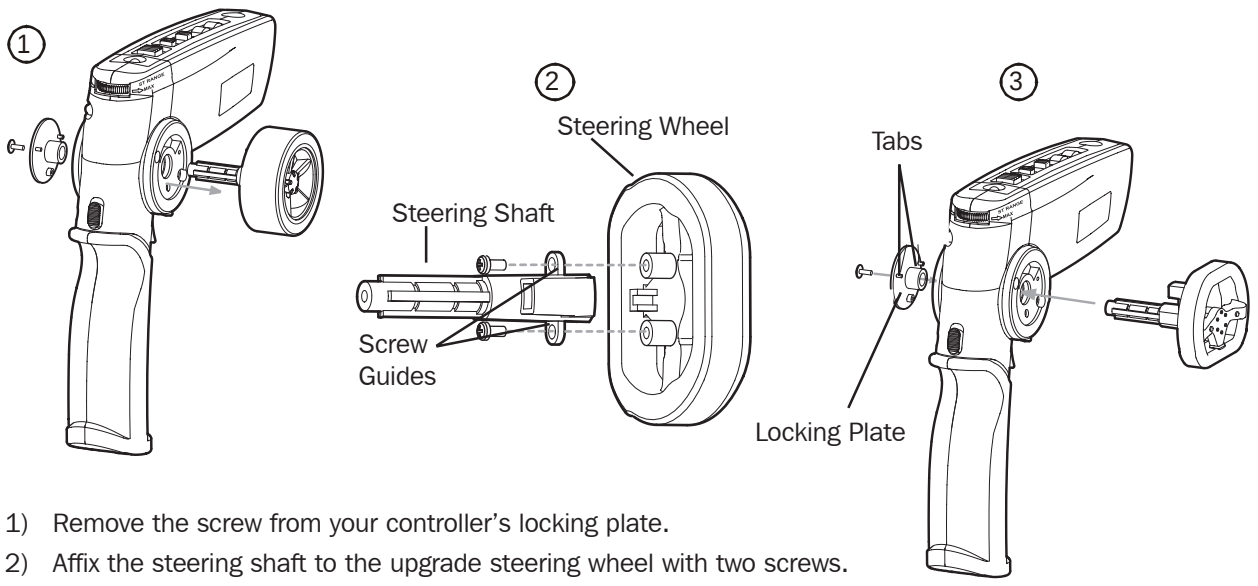

1) Remove the screw from your controller's locking plate.
2) Affix the steering shaft to the upgrade steering wheel with two screws.
3) Align and insert the steering shaft into the controller.
   Align tabs on the locking plate and affix with the original screw.

©2004 RadioShack Corporation
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

www.xmodsRC.com

Printed in China
04A04